


# ASSEMBLY INSTRUCTION

N723P243195

N723P243197

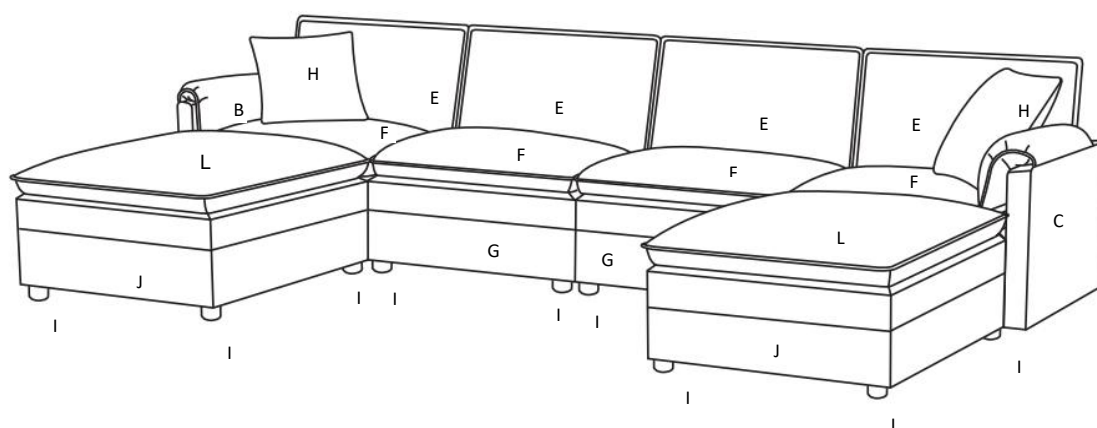










## Return & warranty policy:











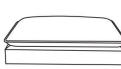
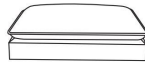
- we strive to offer the highest quality products, and we also try our best to satisfy each and every customer that orders from us with replacement parts or service as needed.
- If the item is damaged or defective, please take photos as evidence for replacements and refunds.
- please do not return to store, contact the seller if you have any troubles with this product.

## ASSEMBLY INSTRUCTION





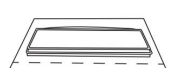




### HARDWARE LIST

| NO | DESCRIPTION                | SKETCH  | QTY   | NO | DESCRIPTION       | SKETCH  | QTY   |
|----|----------------------------|---|-------|----|-------------------|---|-------|
| ①  | Plastic Washer             |  | 27PCS | ⑥  | Spring Washer(M8) |  | 25PCS |
| ②  | Bolt(M8*40MM)              |  | 19PCS | ⑦  | Nut(M8)           |  | 9PCS  |
| ③  | Bolt(M8*80MM)              |  | 6PCS  | ⑧  | Allen Wrench(S5)  |  | 3PCS  |
| ④  | Double Ended Bolt(M8*70MM) |  | 7PCS  | ⑨  | Socket Spanner    |  | 1PC   |
| ⑤  | Flat Washer(M8)            |  | 37PCS |    |                   |   |       |










### PARTS LIST
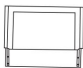
| NO | DESCRIPTION                              | SKETCH  | QTY  | NO | DESCRIPTION                                      | SKETCH  | QTY   |
|----|--|---|------|----|--|---|-------|
| A  | Backrest                                 |  | 4PCS | G  | Seat Frame                                       |  | 4PCS  |
| B  | Left Armrest                             |  | 1PC  | H  | Pillow   |  | 2PCS  |
| C  | Right Armrest                            |  | 1PC  | I  | Leg  |  | 24PCS |
| D  | Back and Seat Cushion Package            |  | 4PCS | J  | Ottoman Seat Frame                               |  | 2PCS  |
| E  | Back Cushion after decompression from(D) |  | 4PCS | K  | Ottoman Seat Cushion Package                     |  | 2PCS  |
| F  | Seat Cushion after decompression from(D) |  | 4PCS | L  | Ottoman Seat Cushion after decompression from(K) |  | 2PCS  |







### HARDWARE LIST N723P243195

| NO | DESCRIPTION                | SKETCH  | QTY   | NO | DESCRIPTION       | SKETCH  | QTY   |
|----|----------------------------|---|-------|----|-------------------|---|-------|
| ①  | Plastic Washer             |  | 9PCS  | ⑥  | Spring Washer(M8) |  | 15PCS |
| ②  | Bolt(M8*40MM)              |  | 9PCS  | ⑦  | Nut(M8)           |  | 9PCS  |
| ③  | Bolt(M8*80MM)              |  | 2PCS  | ⑧  | Allen Wrench(S5)  |  | 1PC   |
| ④  | Double Ended Bolt(M8*70MM) |  | 7PCS  | ⑨  | Socket Spanner    |  | 1PC   |
| ⑤  | Flat Washer(M8)            |  | 19PCS |    |                   |   |       |




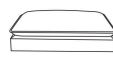





### PARTS LIST N723P243195

| NO | DESCRIPTION                              | SKETCH   | QTY |
|----|--|--|-----|
| A  | Backrest                                 |    | 2   |
| B  | Left Armrest                             |   | 1   |
| C  | Right Armrest                            |  | 1   |
| D  | Back and Seat Cushion Package            |  | 2   |
| E  | Back Cushion after decompression from(D) |  | 2   |
| F  | Seat Cushion after decompression from(D) |  | 2   |
| G  | Seat Frame                               |  | 2   |
| H  | Pillow                                   |  | 2   |
| I  | Leg                                      |  | 8   |


### HARDWARE LIST N723P243197

| NO | DESCRIPTION     | SKETCH  | QTY   | NO | DESCRIPTION       | SKETCH  | QTY   |
|----|-----------------|---|-------|----|-------------------|---|-------|
| ①  | Plastic Washer  |  | 18PCS | ⑥  | Spring Washer(M8) |  | 10PCS |
| ②  | Bolt(M8*40MM)   |  | 10PCS | ⑦  | Nut(M8)           |  | 2PCS  |
| ③  | Bolt(M8*80MM)   |  | 4PCS  | ⑧  | Allen Wrench(S5)  |  | 2PCS  |
| ⑤  | Flat Washer(M8) |  | 18PCS |    |                   |   |       |


### PARTS LIST N723P243197

| NO | DESCRIPTION                                      | SKETCH   | QTY |
|----|--|--|-----|
| A  | Backrest   |    | 2   |
| D  | Back and Seat Cushion Package                    |   | 2   |
| E  | Back Cushion after decompression from(D)         |  | 2   |
| F  | Seat Cushion after decompression from(D)         |  | 2   |
| G  | Seat Frame                                       |  | 2   |
| J  | Ottoman Seat Frame                               |  | 2   |
| K  | Ottoman Seat Cushion Package                     |  | 2   |
| L  | Ottoman Seat Cushion after decompression from(K) |  | 2   |
| I  | Leg  |   | 16  |


**DIAGRAEM 1** Insert the Backrest(A) into the Seat Frame(G).

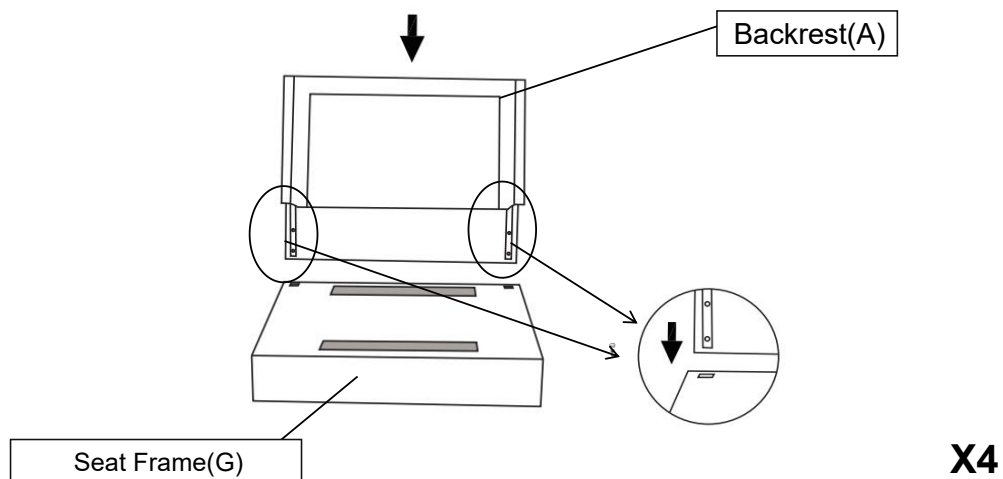


**DIAGRAEM 2** Install the Backrest(A) to Seat Frame(G) using Bolts(②) ,Flat Washers(⑤) ,Sping Washers (⑥) with Allen Wrench(⑧),turning clockwise until tight.

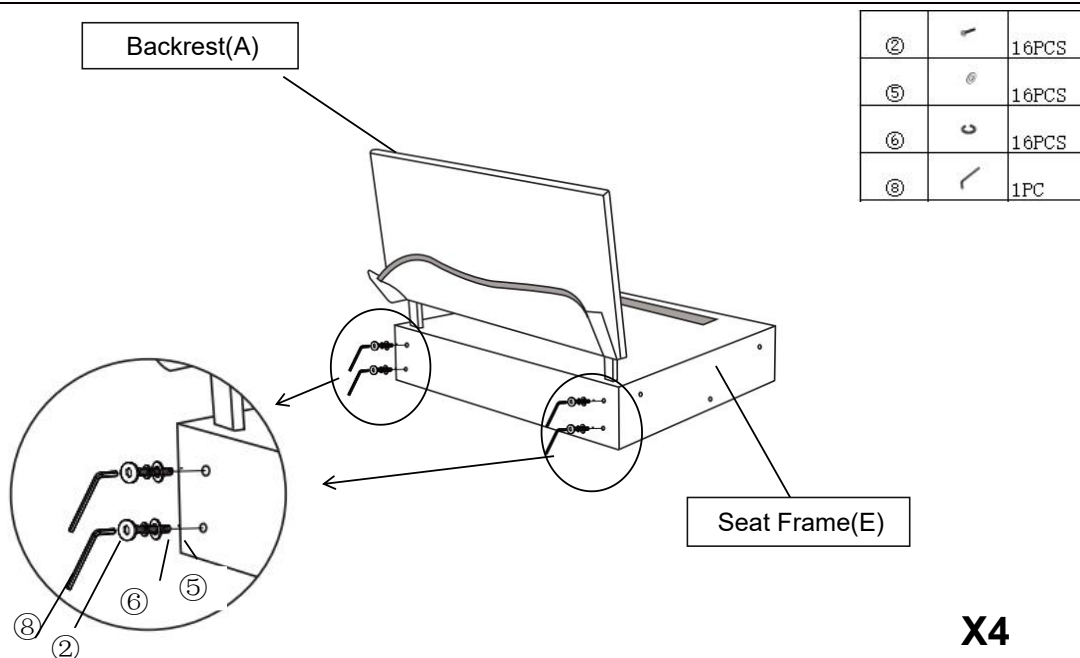


**DIAGRAEM 3** Attach the magic tape to the back of the Seat Frame(G). Assemble the remaining seats according to the above steps.

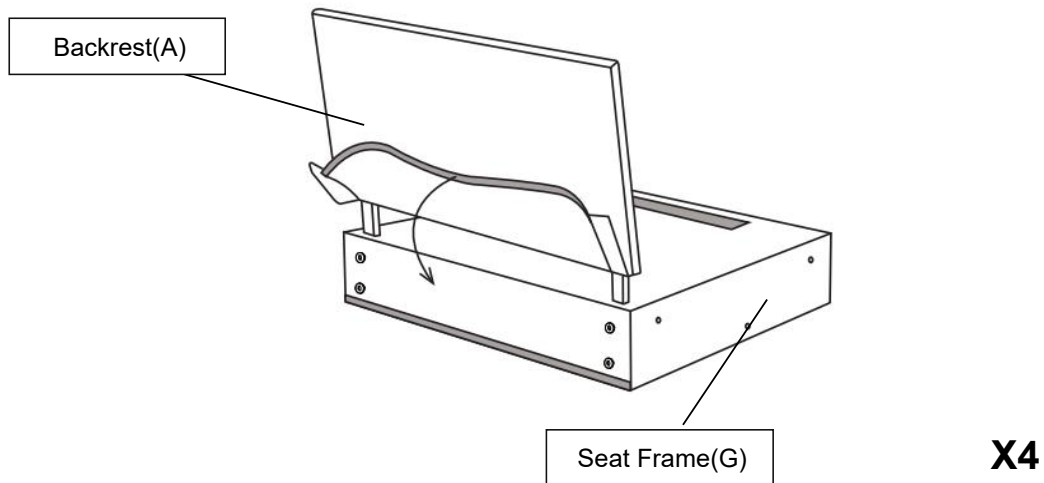


**DIAGRAEM 4** Insert the Double Ended Bolts(M8\*70MM) (④) into the hole of the Left Armrest (B) and turning clockwise until tight.

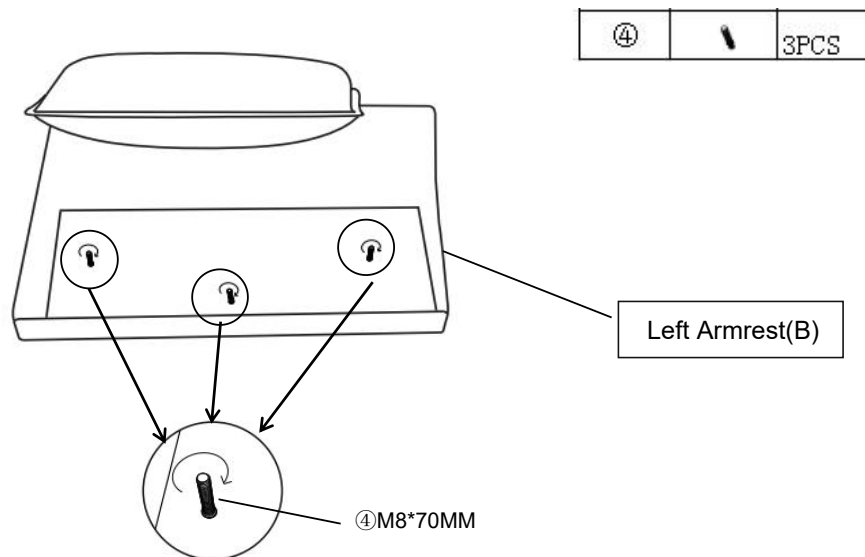


**DIAGRAEM 5** Attach the Seat Frame(G) to the Left Armrest(B) using Nuts (⑦) , Flat Washers(⑤) and Spring Washers(⑥) with Socket Spanner(⑨) ,turning clockwise until tight.

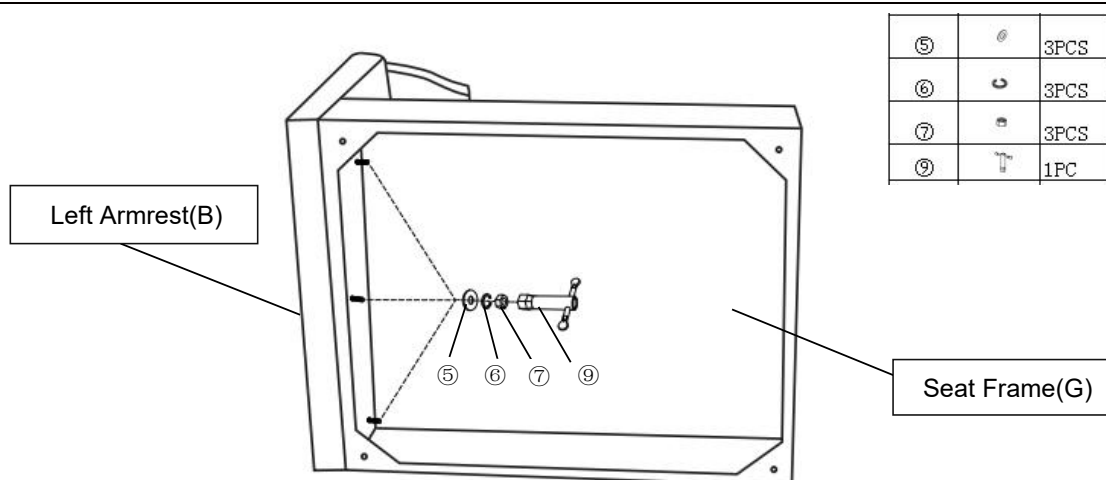


**DIAGRAEM 6** Place the Plastic Washers(①) on the legs(I) .Then attach the legs(I) to the sofa.  
Note: The use of Plastic Washer(①) are OPTIONAL and are especially useful to help alleviate slight wobbleness. Some Legs may need more than one Plastic Washer(①) while some Legs may not need any.

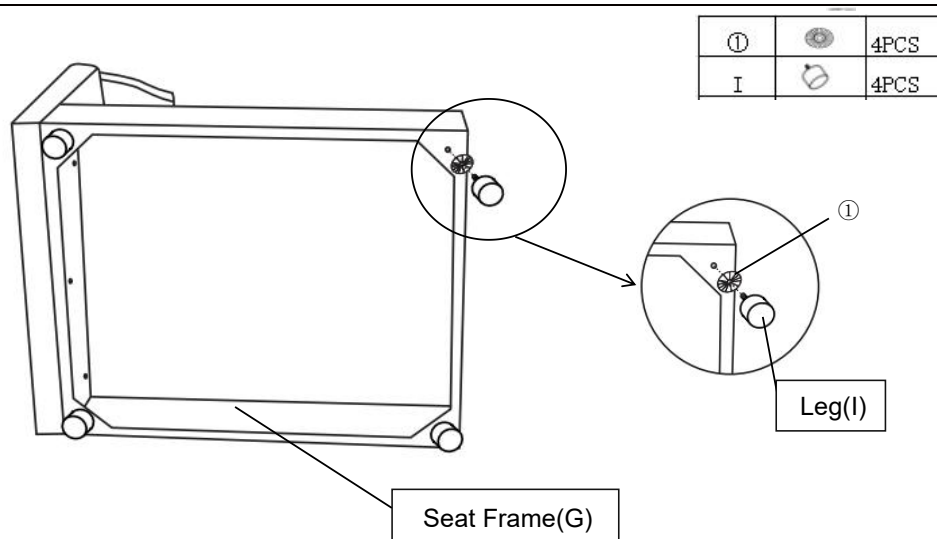

**DIAGRAEM 7** Insert the Double Ended Bolt(M8\*70MM) (④) into the hole of the Right Armrest(C) and turning clockwise until tight.

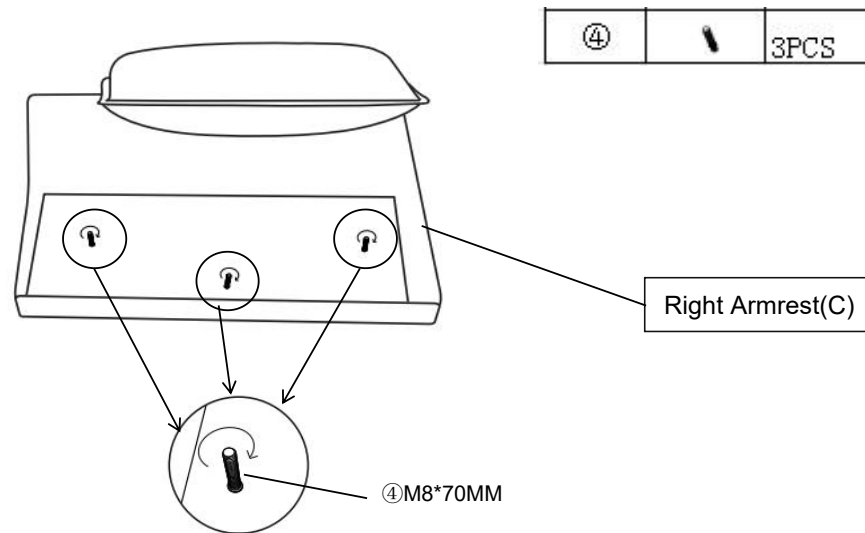


**DIAGRAEM 8** Attach the Seat Frame(G) to the Right Armrest(C) using Nut (⑦) ,Flat Washer(⑤) ,Spring Washer(⑥) with Socket Spanner(⑨) ,turning clockwise until tight.

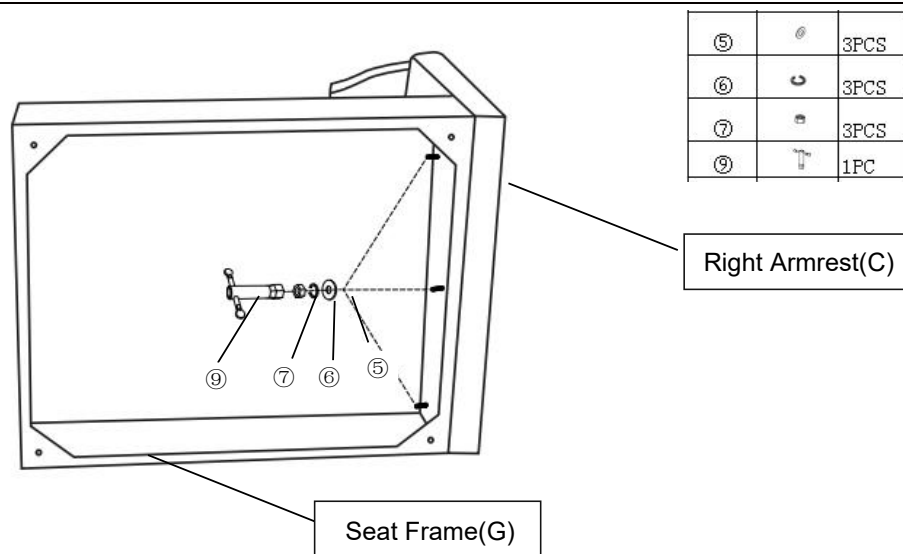





**DIAGRAEM 9** Repeat the Step 6 to install the 4pcs Legs(I) to Seat Frame(G).

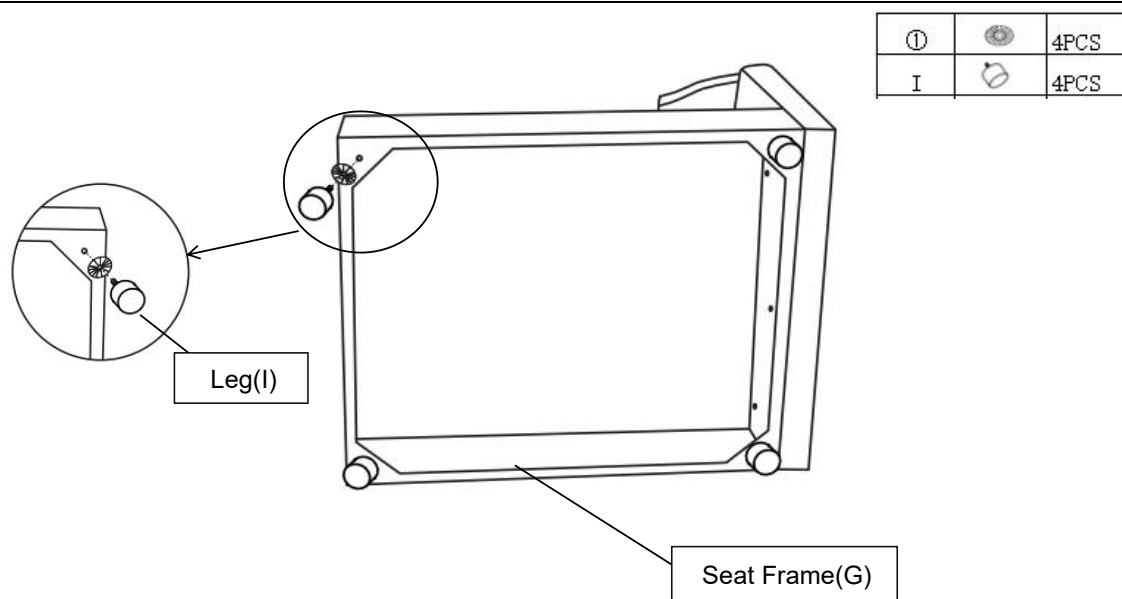


**DIAGRAEM 10** Repeat the Step 6 to install the 4pcs Legs(I) to Seat Frame(G).

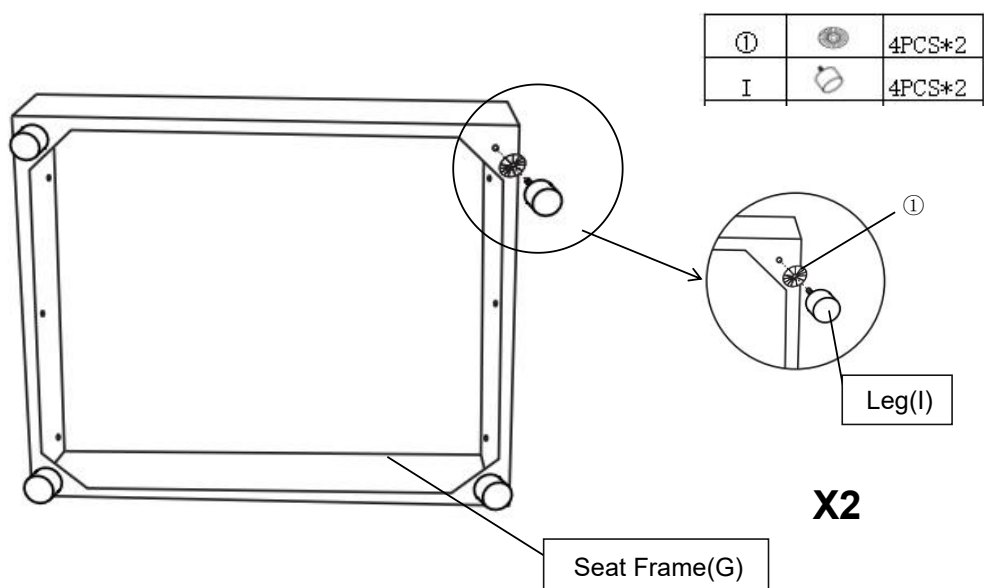


**DIAGRAEM 11** Connect all of the fully assembled Seat Frames one by one using the Bolts(③) ,Flat Washers(⑤) with Allen Wrench(⑧),the other side using Nuts (⑦),Flat Washers(⑤) with Socket Spanner(⑨) as picture showed,turning clockwise until tight.

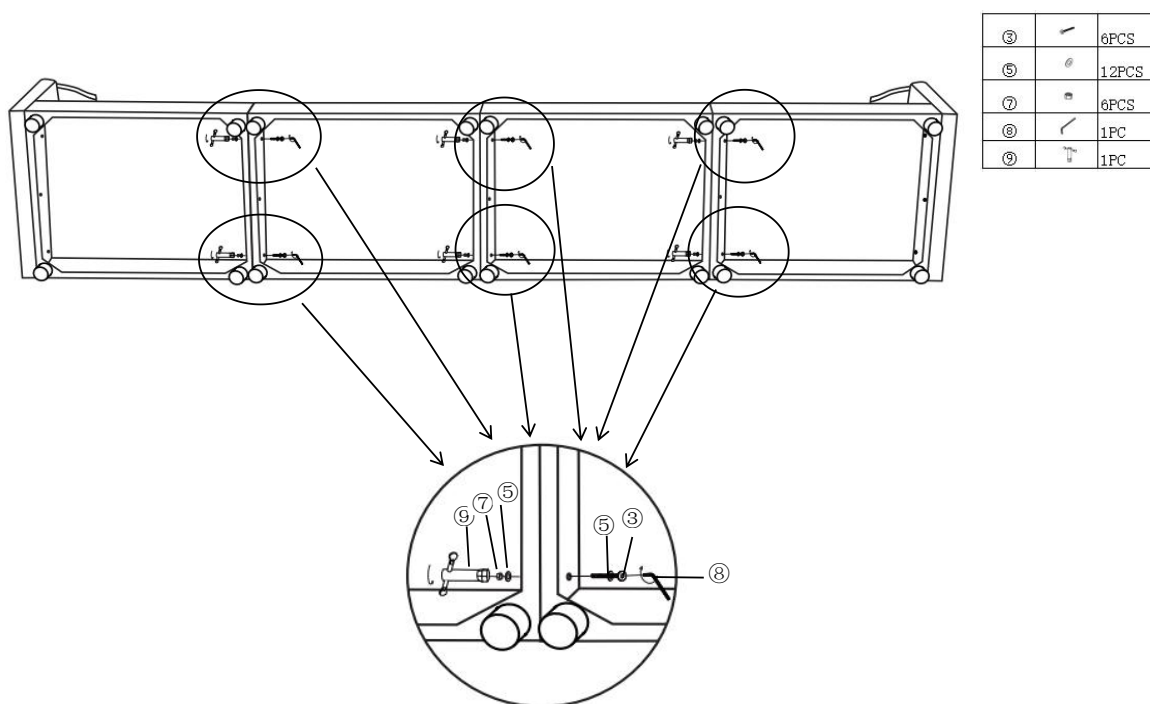


**DIAGRAEM 12** Cut the Back and Seat Cushion Package (D) , then take out 4 pcs Back Cushions (E) and 4 pcs Seat Cushions (F).Full decompression may take up to 72 hours.

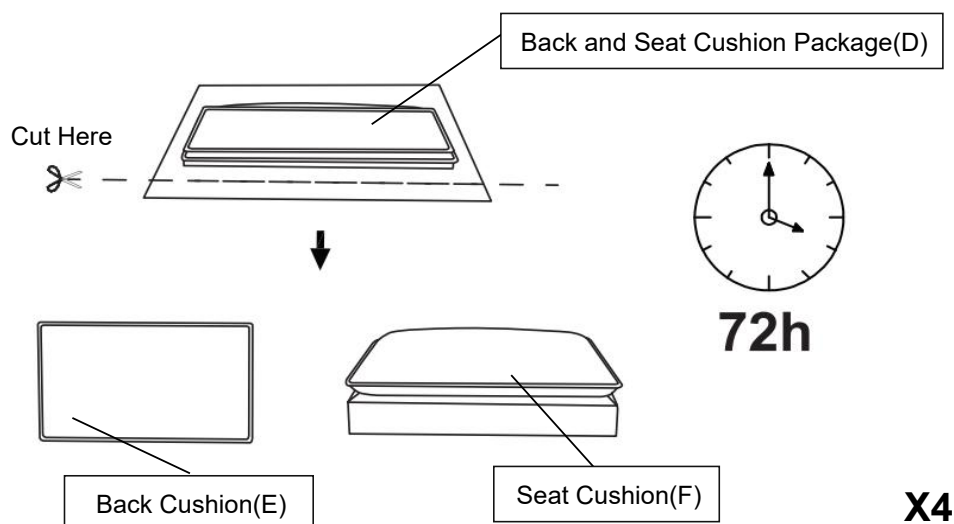


**DIAGRAEM 13** Put the 4pcs Seat Cushions(F) and 4pcs Back Cushions(E) on the Sofa.

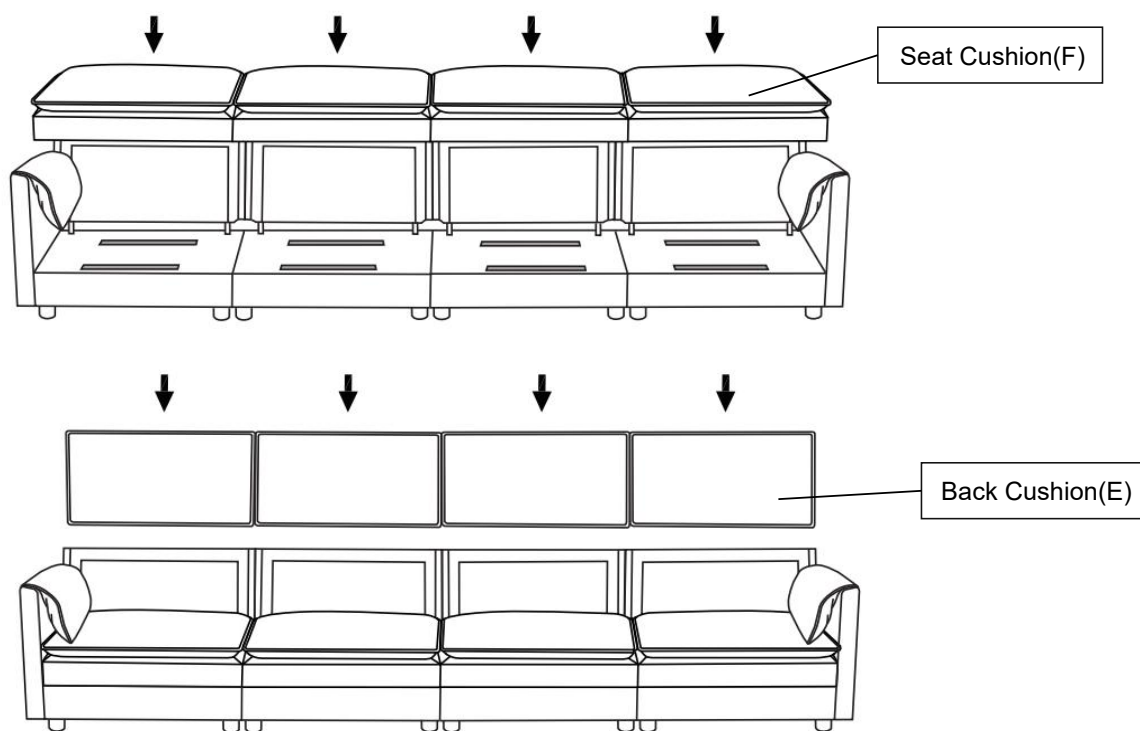


**DIAGRAEM 14** Put the 2 pcs Pillows(H) on the Sofa.

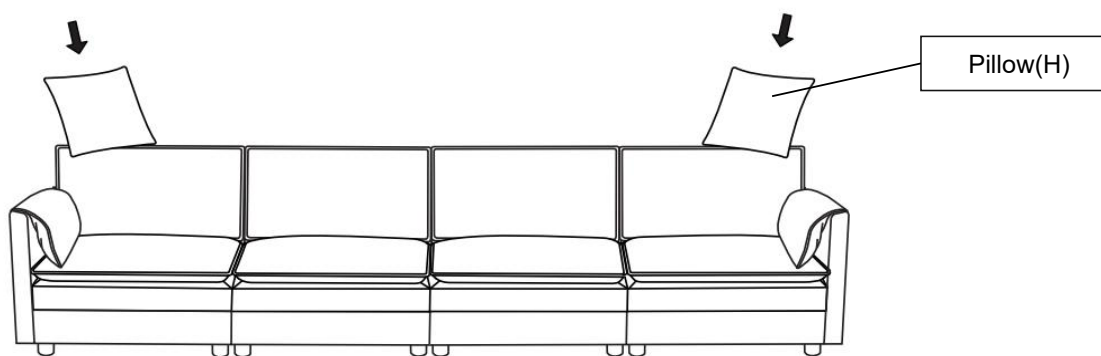


**DIAGRAEM 15** Repeat the Step 6 to install the 4pcs Legs(I) to Ottoman Seat Frame(J).

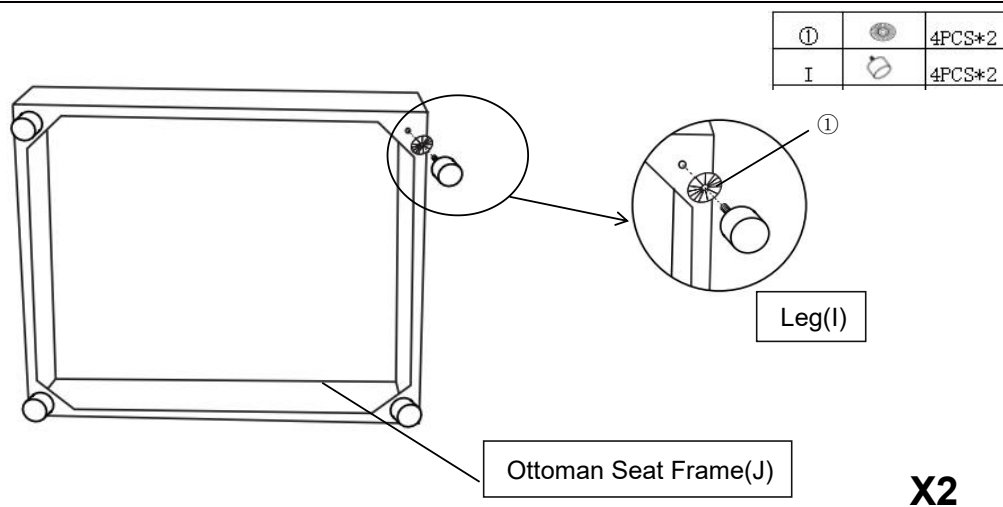

**DIAGRAEM 16** Open the Ottoman Seat Cushion Package (K), then take out 2 pcs Ottoman Seat Cushion (L) .Full decompression may take up to 72 hours.

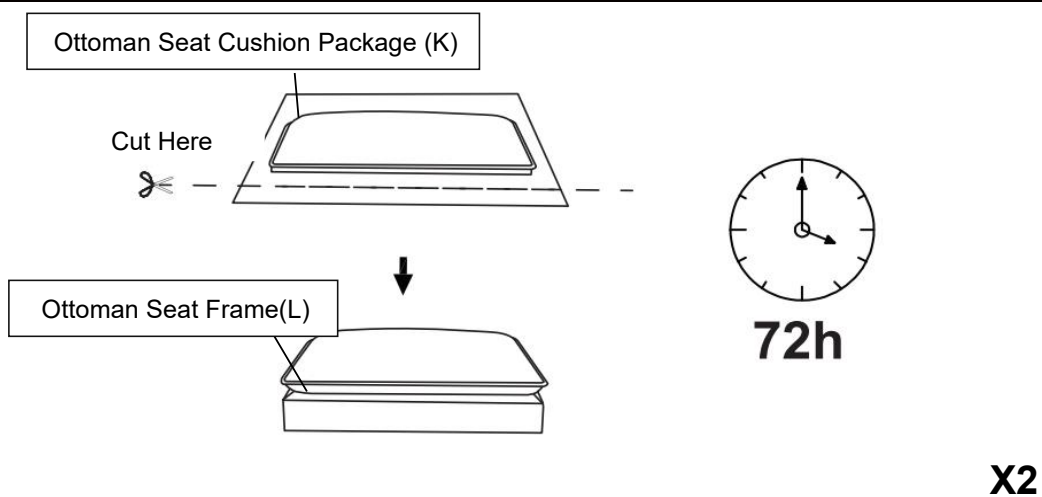


**DIAGRAEM 17** Put the 2pcs Ottoman Seat Cushion (L) on the Ottoman Seat Frame(J).Your Ottoman is ready for use.

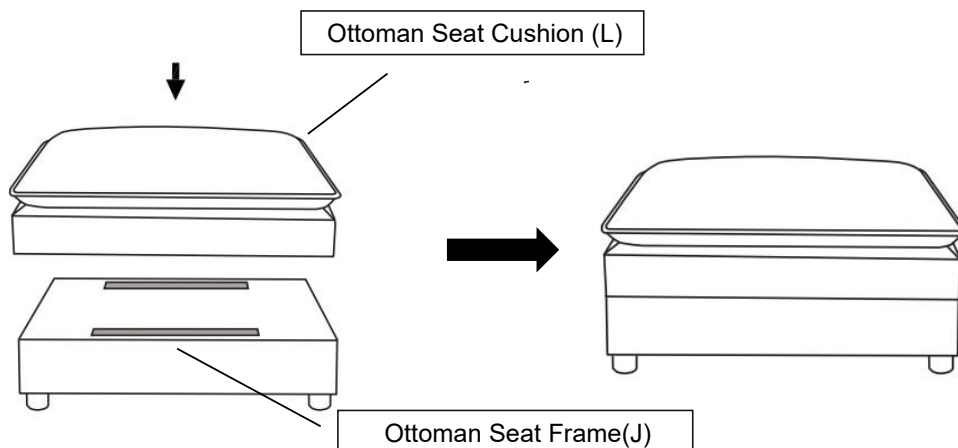

**X2**

**DIAGRAM 18** Your Sectional Sofa is ready for use.Your Sectional Sofa can only be used on a flat, level surface.

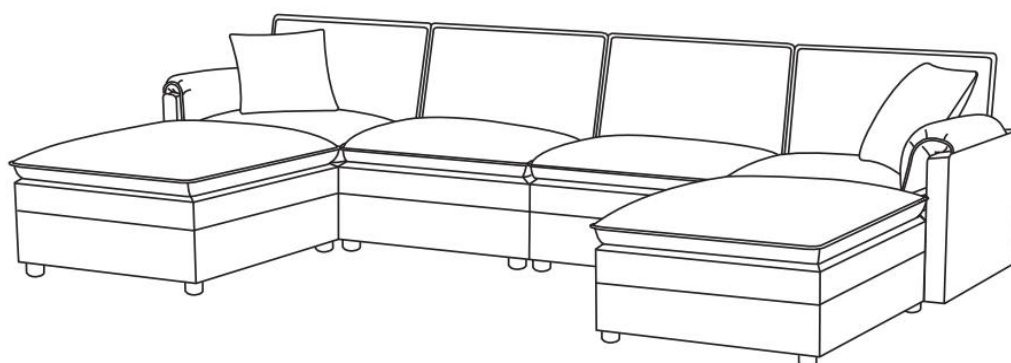

**Complete**